


# How to prepare the end of a shielded wire for connections . . .

---


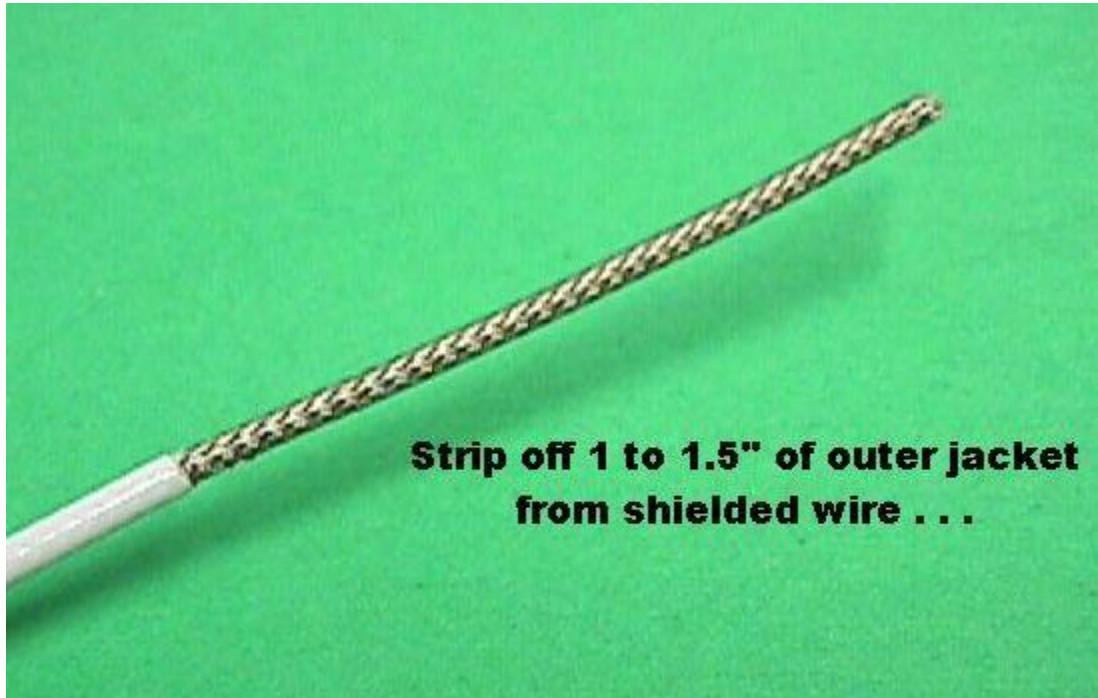


**Bunch up shielding braid against outer jacket to make it "fatter" . . .**



**Fold braid and inner conductor back 180 degrees on itself . . .**



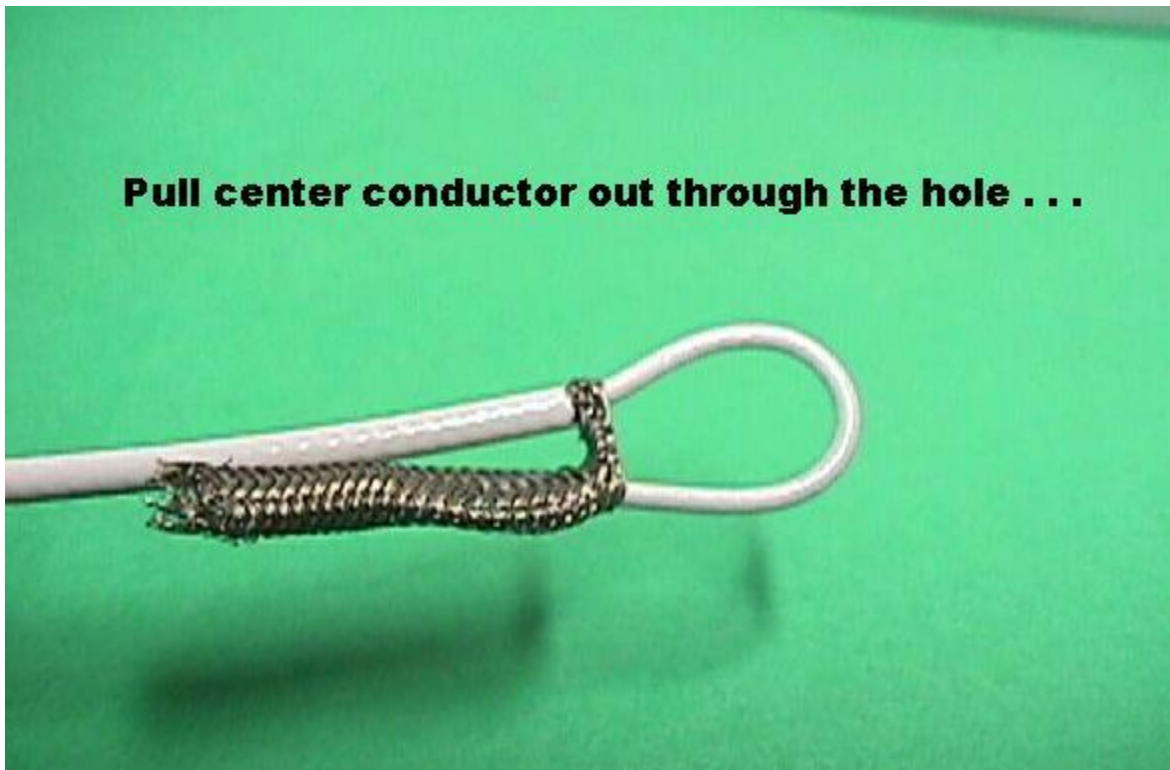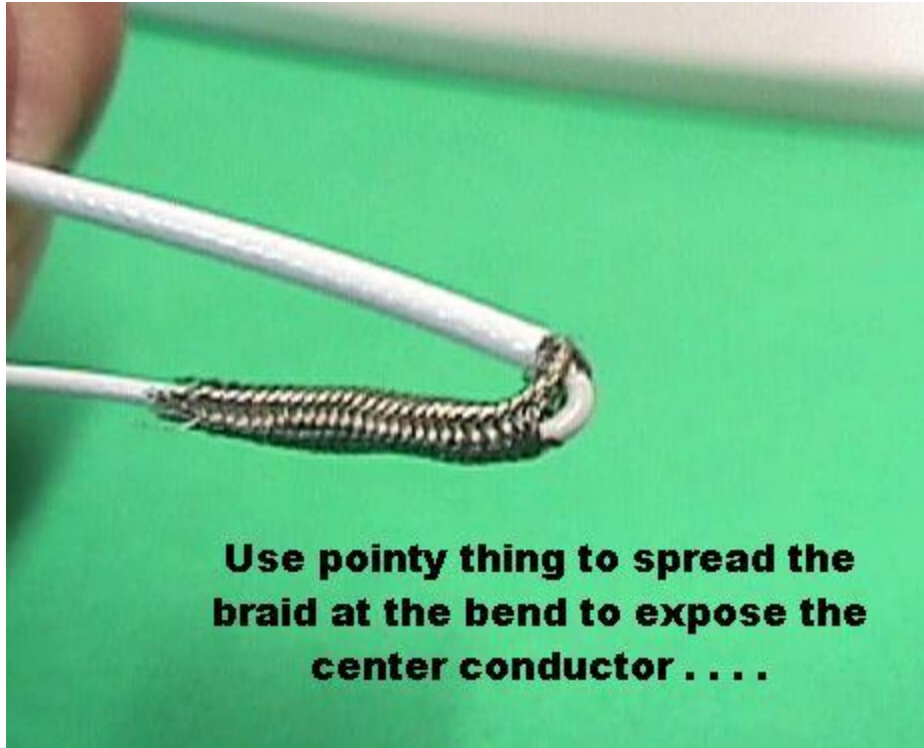

**Pull braid back out to full length and trim ends to desired length before you . . .**

